
# ASSEMBLY AND INSTALLATION INSTRUCTIONS


P0240

# WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

 NOTES: 1. Before installing, consult local electrical codeds for wiring and grounding requirements.

2. READ AND SAVE THESE INSTRUCTIONS.

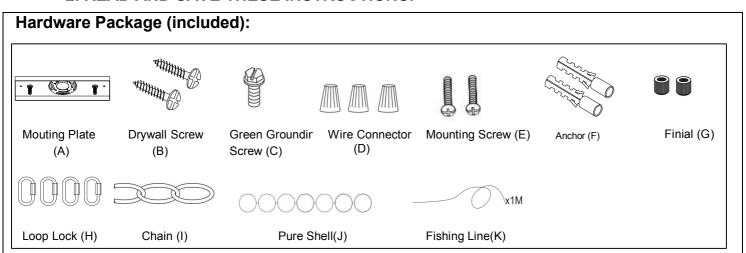




#### **Installation Steps**

## Turn off the power at fuse or circuit box

- Cut the "H" plastic buckles with scissor when take down the PE bags. (See Fig.1)
- 2. Set holes on the wall surface for drilling. Remove the Mounting Plate from the Canopy by removing two finials. Drill two set holes. Thread the anchors into the holes, then attach the Mounting Plate to the outlet box by using two mounting screws. Secure the two dry wall screws through the set holes into the anchors.
- 3.Connect the chain:
  - Determine length of chain needed to achieve desired fixture height. (To remove excess chain section, use pliers to bend link open.)
  - Weave the fixture wires through the chain, top loop and canopy.
- 4. Connect both ends of the chain to the loop using a loop lock.
- Thread the fixture wire and fixture grounding wire through the top loop, canopy and mounting plate.

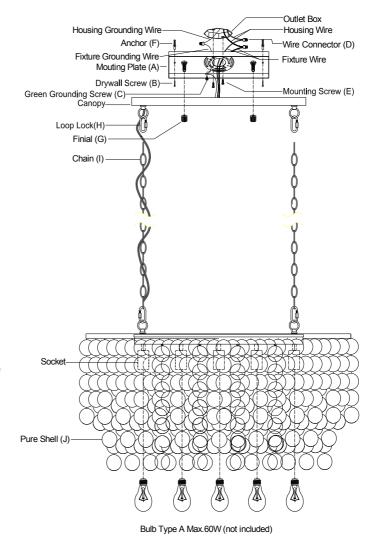





- 6.Pull out the source wires from the outlet box.
  - Make wire connections using wire connectors as follows:
  - ---Connect the hot wire (usually black insulation) from the power source to the smooth-coated wire(marked) from the fixture.
  - ---Connect the neutral wire (usually white insulation) from the power source to the ribbed-coated wire(unmarked) from the fixture.
  - ---Attach the fixture grounding wire (usually green insulation or bare wire) to the mounting plate with the green grounding screw, or connect to the source grounding wire if available.


    Carefully put the wires back into the outlet box.
- 7. Attach the canopy to the mounting plate and secure it with two finials.
- 8. Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.

## Turn on the power at fuse or circuit box

The following parts are available for re-order if damaged or missing.

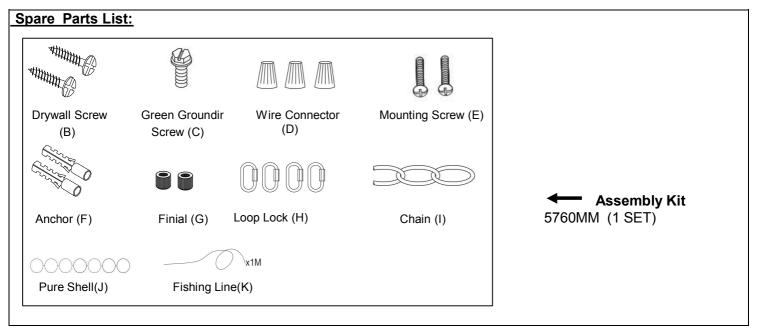

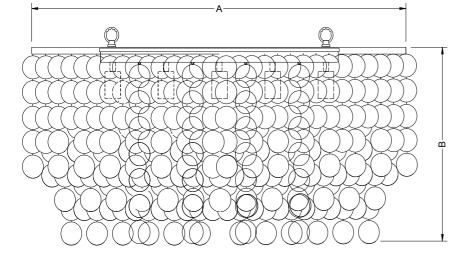

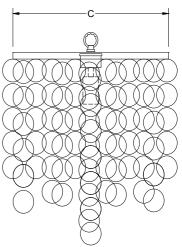

A: 36"

B: 18.25"

C: 15"

